

User Replaceable Parts

User Replaceable Part	Parts Price List Name	Part Number
Paper support	Paper support	1022997
Printer cover	Printer cover	1035802
Logo	Logo plate	1036165

Accessories

Ink Cartridge

Use only the ink cartridge specified in the table below with the EPSON Stylus COLOR 300. Use EPSON ink cartridges within six months of installing them and before the expiration date on the package.

Cartridge	Part number
Color ink cartridge (CMYK)	S020138

Media

Media name	Size	Part number
EPSON 360 dpi Ink Jet Paper	Letter A4	S041060 S041059
EPSON High Quality Ink Jet Paper	Letter A4	S041111 S041117
EPSON Photo Quality Ink Jet Paper	Letter Legal A4	S041062 S041067 S041061
EPSON Photo Quality Glossy Paper	Letter A4	S041124 S041126
EPSON Photo Quality Glossy Film	Letter A4 A6	S041072 S041071 S041107
EPSON Ink Jet Transparencies	Letter A4	S041064 S041063
EPSON Photo Paper/ Cards	4 × 6 inches	S041134
EPSON Photo Quality Ink Jet Cards	8 × 10 inches A6	S041122 S041054
EPSON Photo Quality Self Adhesive Sheets	A4	S041106

Printer Specifications

Printing

Printing method	On-demand ink jet
Nozzle configuration	Monochrome (black) 31 nozzles Color (cyan, magenta, yellow) 33 nozzles (11 per color × 3)
Print speed (text)	200 characters per second (cps) in LQ mode at 10 cpi
Print speed (graphics)	200 inches per second (ips) at 360 dpi
Printable columns (text)	80 columns at 10 cpi
Printable columns (graphics)	2880 dots at 360 dpi

Resolution	EPSON 720 dpi mode* 360 × 360 dpi mode 180 × 180 dpi mode	Print direction	Bidirectional with logic seeking for text and graphics.
	* In EPSON 720 dpi mode, prints at 360 × 360 dpi on a matrix of 720 dots per inch using smaller dots than the 360 × 360 dpi mode. Dots are printed in an alternating pattern in which horizontal and vertical dots are non-contiguous. Contiguous printing of dots is available only on the diagonal plane. The result is a significantly denser dot pattern, finer detail, and smoother edges than output produced by 360 × 360 dpi printing.	Control codes	ESC/P Raster
		Input buffer	25KB
		Fonts	Bitmap LQ and EPSON Courier (10 cpi)
		Character table	ASCII; includes 37 character codes (A to Z and 0 to 9), one space code, and one symbol code (#)

Paper

Paper type	Size	Paper types	Thickness	Weight
Single sheets	Letter (8.5 × 11 inches) Legal (8.5 × 14 inches) Half Letter/Statement (5.5 × 8.5 inches) Executive (7.25 × 10.5 inches) A4 (210 × 297 mm) B5 (182 × 257 mm)	Plain bond paper and special ink jet papers distributed by EPSON	0.003 to 0.004 inch (0.08 to 0.11 mm)	17 to 24 lb (64 to 90 g/m ²)
Envelopes	No. 10: 9.5 × 4.1 inches (240 × 104 mm) DL: 8.7 × 4.3 inches (220 × 110 mm)	Plain bond paper or air mail paper	0.006 to 0.02 inch (0.16 to 0.52 mm)	12 to 24 lb (45 to 90 g/m ²)
Glossy paper	Letter (8.5 × 11 inches) A4 (210 × 297 mm)	Glossy paper distributed by EPSON	0.0066 to 0.0070 inch (0.17 to 0.18 mm)	—
Transparencies and glossy film	Letter (8.5 × 11 inches) A4 (210 × 297 mm) A6 (105 × 148 mm, glossy film only)	Transparencies and glossy film distributed by EPSON	0.005 to 0.006 inch (0.13 to 0.15 mm)	—
Photo paper	4 × 6 inches (102 × 152 mm)	Special photo paper distributed by EPSON	—	—
Index cards	8 × 10 inches (203 × 254 mm) A6 (105 × 148 mm)	Ink jet cards distributed by EPSON	0.0091 inch (0.23 mm) maximum	50 lb (188 g/m ²)
Self adhesive sheets	A4 (210 × 297 mm)	Self adhesive sheets distributed by EPSON	0.0079 inch (0.2 mm) maximum	—

Note:

Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, EPSON cannot attest to the quality of any non-EPSON brand or type of paper. Always test samples of paper stock before purchasing large quantities or printing large jobs.

Poor quality paper may reduce print quality and cause paper jams and other problems. If you encounter problems, switch to a higher grade of paper.

Ink jet paper, envelopes, glossy film, glossy paper, transparencies, and self adhesive sheets are usable only under these conditions:

Temperature: 59 to 77 °F (15 to 25 °C)

Humidity: 40 to 60% RH

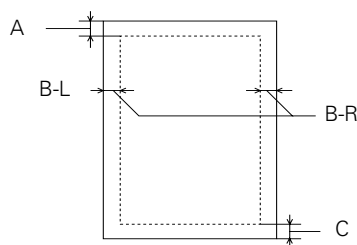
EPSON Photo Quality Glossy Film and Photo Quality Self Adhesive Sheets should be stored under these conditions:

Temperature: 59 to 86 °F (15 to 30 °C)

Humidity: 20 to 60% RH

Printable areas

Single sheets, transparencies, index cards, and self adhesive sheets



A: The minimum top margin is 0.12 inch (3.0 mm).

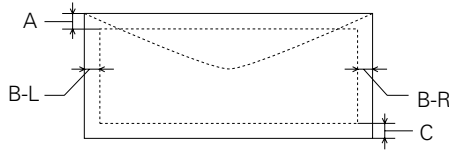
When loading multiple sheets of EPSON Photo Quality Glossy Film, the minimum top margin is 1.2 inches (30 mm).

B-L: The minimum left margin is 0.12 inch (3.0 mm).

B-R: The minimum right margin is 0.12 inch (3.0 mm); except for Letter and Legal size paper, which are 0.38 inch (10.0 mm).

C: The minimum bottom margin is 0.55 inch (14.0 mm).

Envelopes



- A: The minimum top margin is 0.12 inch (3.0 mm).
 B-L: The minimum left and right margins are 0.12 inch (3.0 mm).
 B-R: The minimum right margin is as follows:
 1.32 inches (33.8 mm) for No. 10 envelopes.
 0.54 inch (13.8 mm) for DL envelopes.
 C: The minimum bottom margin is 0.55 inch (14.0 mm).

Ink Cartridge

Specification	Color ink cartridge (S020138)
Colors	Cyan, Magenta, Yellow, and Black
Print capacity*	220 pages (A4, 360 dpi, 5% duty each color) 450 pages (A4, monochrome text printing only)
Cartridge life	2 years from production date, if unopened Within 6 months after opening package at 77 °F (25 °C)
Storage temperature	-22 to 104 °F (-30 to 40 °C) 1 month at 104 °F (40 °C)
Transit temperature	-22 to 140 °F (-30 to 60 °C) 1 month at 104 °F (40 °C) 120 hours at 140 °F (60 °C)
Freezing temperature**	21.2 °F (-6 °C)
Dimensions	1.81 (W) × 2.22(D) × 1.52 (H) inches 45.9 (W) × 56.5 (D) × 38.5 (H) mm

* The print capacity may vary, depending on how often you clean the print head.

** The ink cartridge thaws and is usable after approximately 3 hours at 77 °F (25 °C).



Caution:
To ensure good results, use genuine EPSON ink cartridges. Other products may cause damage to your printer not covered by EPSON's warranty.

Do not use an ink cartridge if the date on the package has expired.

Mechanical

Paper feed method	Friction
Paper path	Sheet feeder, rear entry
Sheet feeder capacity	About 100 sheets of 17 lb (64 g/m ²) paper
Total print volume	10,000 pages (Letter or A4)

Dimensions

Storage

Width: 15.6 inches (397 mm)
 Depth: 8.1 inches (206 mm)
 Height: 6.4 inches (162 mm)

Printing

Width: 15.6 inches (397 mm)
 Depth: 12.6 inches (319 mm)
 Height: 10.6 inches (269 mm)

Weight

8.6 lb (3.9 kg) without the ink cartridge

Electrical

Specification	120V Model	220-240V Model
Input voltage range	103.5 to 132V	198 to 264V
Rated frequency range	50 to 60 Hz	
Input frequency range	49.5 to 60.5 Hz	
Rated current	0.5A	0.3A
Power consumption	Approx. 15W (ISO 10561 Letter Pattern)	

Note:

Check the label on the back of the printer for your printer's voltage.

Environmental

Temperature

Operation: 50 to 95 °F (10 to 35 °C)
 Storage: -4 to 140 °F (-20 to 60 °C),
 stored in shipping container
 1 month at 104 °F (40 °C)
 120 hours at 140 °F (60 °C)

Humidity

Operation: 20 to 80% RH
 Storage: 5 to 85% RH (in shipping container, without condensation)

Safety Approvals

Safety standards: UL 1950 with D3, CSA C22.2 950 with D3

EMC: FCC part 15 subpart B class B, CSA C108.8 class B

Parallel Interface

Forward channel

Data format: 8-bit parallel, IEEE-1284 compatibility mode

Synchronization: $\overline{\text{STROBE}}$ pulse

Handshake timing: BUSY and $\overline{\text{ACKNLG}}$ signals



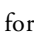

Signal level: TTL compatible

Connector: 36-pin Centronics connector or equivalent



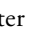
Reverse channel	
Transmission mode:	IEEE-1284 Nibble mode
Adaptable connector:	57-30360 Amphenol connector or equivalent
Synchronization:	Refer to the IEEE-1284 specification.
Handshaking:	Refer to the IEEE-1284 specification.
Signal level:	IEEE-1284 Level 1 device
Data transmission timing:	Refer to the IEEE-1284 specification.
Extensibility request:	The printer responds to the extensibility request in the affirmative when the request is 00H or 04H, which means: 00H: Request Nibble mode of reverse channel transfer 04H: Request device ID in Nibble mode of reverse channel transfer



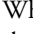
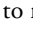




Control Panel

Buttons

Cleaning 	Moves the print head to the ink cartridge replacement position if pressed for 3 seconds while the  Ink Out light is flashing or on. Returns the print head to its home position after ink cartridge replacement. Performs print head cleaning if pressed for 3 seconds when the  Ink Out light is off.
Load/Eject 	Loads or ejects paper if pressed and released within 2 seconds. Resumes printing if pressed after a paper out error.

Lights

Power 	The  Power light is on when the printer is on. When the  Power light <i>flashes</i> , the printer is receiving data, or you are replacing the ink cartridge, charging the ink supply system, or cleaning the print head. It may also flash with other lights during printer error conditions.
---	---

Ink Out 	When the  Ink Out light <i>flashes</i> , your ink supply is low. Make sure you have a replacement cartridge. When the  Ink Out light comes on, the ink cartridge is empty and you need to replace it. The  Ink Out light also comes on if an ink cartridge is not installed or not installed properly.
Paper Out 	When the  Paper Out light is on, your paper is out or is loaded incorrectly. Load paper in the sheet feeder, then press the  Load/Eject button to turn off the light and resume printing. When the  Paper Out light <i>flashes</i> , there is a paper jam. Remove the paper from the sheet feeder and then reload it. If the light continues to flash, turn off the printer, remove the paper from the sheet feeder, and gently pull out all jammed paper.





Initialization

The printer can be initialized (returned to a fixed set of conditions) in these ways:

Hardware initialization	The printer is turned on. The printer receives an INIT signal from the parallel interface: pin 31 goes LOW.
Software initialization	Software sends the ESC @ (initialize the printer) command. The last panel settings are kept.

Both initialization methods reset the font according to the default settings selected using the control panel. However, ESC @ does not initialize the printer mechanism, clear the input data buffer, or clear the user-defined character set.

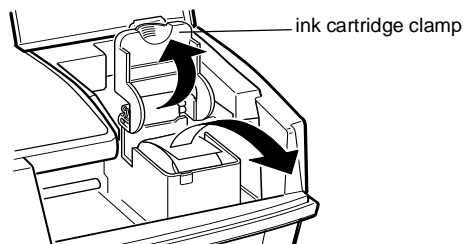
Installing an Ink Cartridge for the First Time

1. Turn on the printer. The  Power and  Ink Out lights come on.
2. Hold down the  Cleaning button for three seconds. The  Power light starts flashing, and the print head moves slightly left to the ink cartridge replacement position.



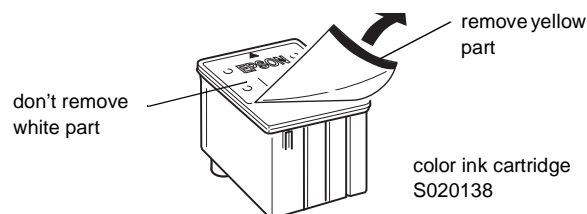
Caution:
To avoid damaging the printer, do not move the print head by hand.

3. Open the printer cover.
4. Lift up the ink cartridge clamp as far as it goes. Then remove the protective material from the cartridge holder.



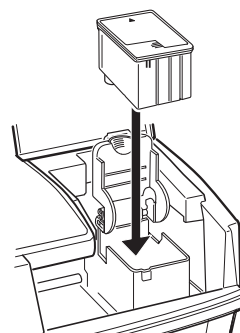
Warning:
If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them immediately with water.

5. Open the ink cartridge package. Next remove only the yellow portion of the tape seal from the top of the cartridge. Don't remove the white portion.



Caution:
You must completely remove the yellow tape seal from the top of the cartridge; installing the cartridge with any portion of it still on will permanently damage the cartridge. Also, do not remove the clear seal from the bottom of the cartridge; ink will leak out.


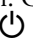
6. Lower the ink cartridge into the holder with the label face up and the arrow mark pointing toward the back of the printer.




7. Press down the ink cartridge clamp until it locks in place.




Caution:
Do not open the clamp again until you replace the ink cartridge; otherwise, the cartridge may become unusable.

8. Press the  Cleaning button. The printer moves the print head to the home (far right) position and charges the ink delivery system. Charging takes a few minutes and, during this time, the  Power light continues to flash.



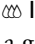
Caution:
Do not turn off the printer while the  Power light is flashing; otherwise, the ink delivery system will not be completely charged.

Note:

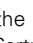
Even if you do not press the  Cleaning button, the printer moves the print head back to its home position about 60 seconds after you replace the cartridge.

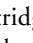
9. Close the printer cover.

Replacing the Ink Cartridge When the Ink Runs Out

When the  Ink Out light flashes, the ink cartridge is low on ink. This is a good time to make sure you have a new cartridge. When the light stays on, the cartridge is empty and you need to replace it as described below.

Note:

If the expiration date of your ink cartridge has passed or if you are having print quality problems, you may need to replace the ink cartridge even though it still contains ink and the  Ink Out light is off. See the next section, "Replacing the Ink Cartridge Before the Ink Runs Out," for instructions.

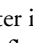
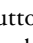
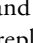
To replace the ink cartridge when the  Ink Out light is flashing or on, follow the steps below.



Caution:

To ensure good results, use genuine EPSON cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON's warranty.

Leave the old cartridge installed in the printer until you are ready to replace it with a new one.

1. Make sure the printer is turned on and not printing, and the  Ink Out light is flashing or on. Then open the printer cover.
2. Hold down the  Cleaning button for three seconds. The  Power light starts flashing, and the print head moves slightly left to the ink cartridge replacement position. (The print head automatically returns to the home position after about 60 seconds if you don't begin the installation procedure.)

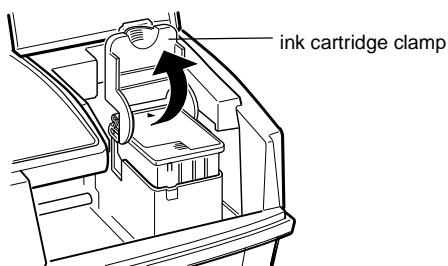


Caution:

To avoid damaging the printer, do not move the print head by hand.

Once you open the ink cartridge clamp or remove an ink cartridge, the ink cartridge becomes unusable. Do not reinstall it even if it still contains ink; otherwise, it may damage the printer or cause the ink level sensor to malfunction.

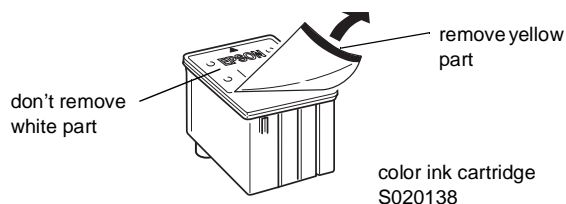
3. Lift up the ink cartridge clamp as far as it goes. The ink cartridge rises partly out of the ink cartridge holder.



Warning:

If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them immediately with water.

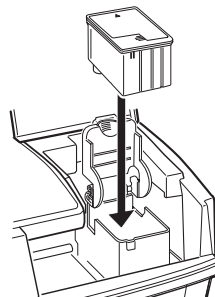
4. Lift the cartridge out of the printer and dispose of it properly.
5. Open the ink cartridge package. Next remove only the yellow portion of the tape seal from the top of the cartridge. Don't remove the white portion.



Caution:

You must completely remove the yellow tape seal from the top of the cartridge; installing the cartridge with any portion of it still on will permanently damage the cartridge. Also, do not remove the clear seal from the bottom of the cartridge; ink will leak out.

6. Lower the new ink cartridge into the holder with the label face up and the arrow mark pointing toward the back of the printer.


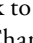


7. Press down the ink cartridge clamp until it locks in place.




Caution:

Do not open the clamp again until you replace the ink cartridge; otherwise, the cartridge may become unusable.


8. Press the  Cleaning button. The printer moves the print head back to the home position and charges the ink delivery system. Charging takes about one minute, and during this time, the  Power light continues to flash.



Caution:


Do not turn off the printer while the  Power light is flashing; otherwise, the ink delivery system will not be completely charged.

Note:

Even if you do not press the  Cleaning button, the printer moves the print head back to its home position about 60 seconds after you replace the cartridge.

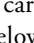
9. Close the printer cover.

Replacing the Ink Cartridge Before the Ink Runs Out

If the expiration date of your ink cartridge has passed, you need to replace the ink cartridge even though it still contains ink and the  **Ink Out** light is off. You may also need to do so if you are having print quality problems that persist even after you try cleaning and aligning the print head as described later in this update.

Note:

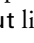

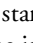
Be sure to use up ink cartridges by the expiration date marked on the cartridge label; otherwise, the ink may become unusable.

To replace an ink cartridge when the  **Ink Out** light is off, follow the steps below.



Caution:

Once you open the ink cartridge clamp or remove an ink cartridge, the ink cartridge becomes unusable. Do not reinstall it even if it still contains ink; otherwise, it may damage the printer or cause the ink level sensor to malfunction.

1. Make sure the printer is turned on and not printing, and the  **Ink Out** light is off. Then open the printer cover.
2. Hold down the  **Load/Eject** button for three seconds. The  **Power** light starts flashing, and the print head moves slightly left to the ink cartridge replacement position.



Caution:

To avoid damaging the printer, do not move the print head by hand.

3. Lift up the ink cartridge clamp.



Warning:

If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them immediately with water.

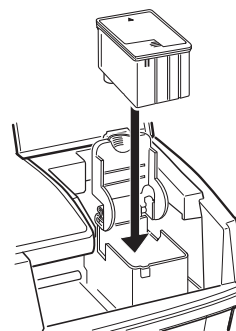
4. Lift the ink cartridge out of the printer and dispose of it properly.
5. Open the ink cartridge package and remove only the yellow portion of the tape seal from the top of the cartridge. Don't remove the white portion.



Caution:

You must completely remove the yellow tape seal from the top of the cartridge; installing the cartridge with any portion of it still on will permanently damage the cartridge. Also, do not remove the clear seal from the bottom of the cartridge; ink will leak out.

6. Lower the new ink cartridge into the holder with the label face up and the arrow mark pointing toward the back of the printer.


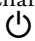


7. Press down the ink cartridge clamp until it locks in place.




Caution:

Do not open the clamp again until you replace the ink cartridge; otherwise, the cartridge may become unusable.


8. Press the  **Load/Eject** button. The printer moves the print head back to the home position and charges the ink delivery system. Charging takes about one minute, and during this time, the  **Power** light continues to flash.



Caution:

Do not turn off the printer while the  **Power** light is flashing; otherwise, the ink delivery system will not be completely charged.

Note:

Even if you do not press the  **Load/Eject** button, the printer moves the print head back to its home position about 60 seconds after you replace the cartridge.

9. Close the printer cover.

Using Plain Paper and Special Media

Whether you print on plain paper or special media, you need to load it according to the guidelines in the table below. You must also select the correct **Media Type** setting in your printer software to match the media you loaded.

Load plain paper and special media into the printer printable side up, and set the paper thickness and adjust levers as described after the table. For complete paper loading instructions, see the *User's Guide*.

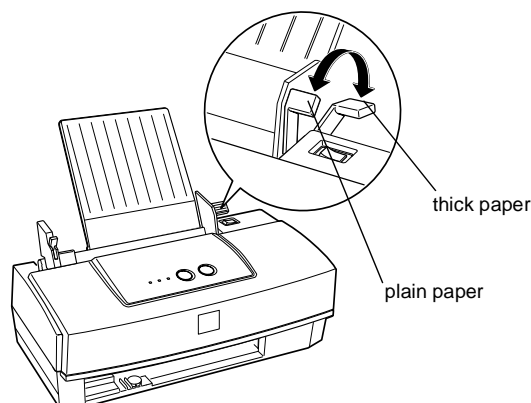
When you load media with this name. . .	Load this many sheets in the sheet feeder. . .	Then select this Media Type setting in your printer software. . .
Plain paper (single sheets)	Up to the arrow mark on the left edge guide (about 100 sheets); for Legal size paper, halfway up to the arrow mark (about 50 sheets)	Plain Paper
Envelopes*	Up to 10	
EPSON 360 dpi Ink Jet Paper	Up to the arrow mark on the left edge guide; for Legal size paper, halfway up to the arrow mark	360 dpi Ink Jet Paper
EPSON Special Coated Paper for 360 dpi Printing		
EPSON High Quality Ink Jet Paper	Up to the arrow mark on the left edge guide; for Legal size paper, halfway up to the arrow mark	Photo Quality Ink Jet Paper
EPSON Photo Quality Ink Jet Paper		
EPSON Special Coated Paper for 720 dpi Printing		
EPSON Photo Quality Ink Jet Cards	Up to 30 index cards with a support sheet beneath the cards Load short edge first	Photo Quality Ink Jet Paper
EPSON 720 dpi Index Cards		
EPSON Photo Quality Self Adhesive Sheets	1 sheet at a time	
EPSON Photo Quality Glossy Paper	1 sheet at a time with a support sheet beneath it	Photo Quality Glossy Paper
EPSON Photo Paper	Up to 20 sheets with a support sheet beneath the stack Load short edge first with larger perforated margin at the top	
EPSON Photo Quality Glossy Film**	1 sheet at a time for best results; use with a support sheet or a sheet of plain paper	Photo Quality Glossy Film
EPSON High Quality Glossy Paper	1 sheet at a time for best results; use with a support sheet or a sheet of plain paper	
EPSON Ink Jet Transparencies	Up to 30 transparencies with a support sheet beneath the stack	Ink Jet Transparencies

* Load envelopes top edge first with the flap side down.

** To load multiple sheets, place up to 30 sheets in the sheet feeder and set the minimum top margin to 1.2 inches (30 mm). You must load A6 size sheets one at a time.

Setting the Thickness Lever

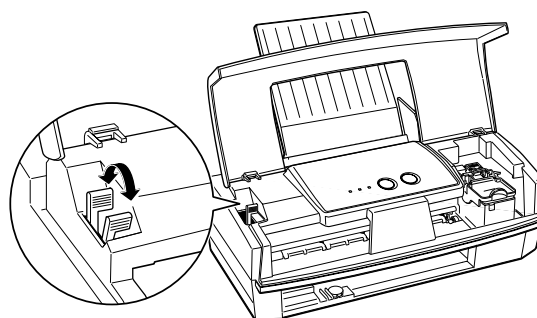
Set the thickness lever according to the media type as shown below.



Lever position	Paper type
Plain paper	Standard paper, coated paper, glossy paper, glossy film, and transparencies
Thick paper	Envelopes, index cards, self adhesive sheets, and photo paper

Setting the Adjust Lever

Set the adjust lever according to the media type as shown below.



Lever position	Paper type
0	Standard paper, coated paper, index cards, glossy paper, glossy film, and transparencies
+	Envelopes

Note:

If the ink on your printout smears, set the adjust lever to the + position.

Testing the Printer

You can run a printer self test to check the operation of the printer. If you encounter a printing problem, running a self test can help you determine whether the problem comes from the printer itself or some other source.


- ❑ If the test results are satisfactory, the problem probably lies in the printer software settings, application settings, interface cable, or computer.
- ❑ If the test page doesn't print correctly (for example, if a part of the printed lines is missing), you may have a problem with your printer. The problem may be a clogged ink nozzle, misaligned print head, or bad ink cartridge. See "Cleaning the Print Head," "Aligning the Print Head," or "Replacing the Ink Cartridge Before the Ink Runs Out," in this update.

Follow these steps to test the printer:

1. Make sure both the printer and computer are turned off.
2. Disconnect the interface cable (and ground connector, if necessary) from the back of the printer.
3. Make sure that paper is loaded in the sheet feeder.




Caution:
Use paper that is at least 7.17 inches (182 mm) wide so ink doesn't spray onto the platen.

4. Hold down the  Load/Eject button and turn on the printer; then release the button. This prints the nozzle check, including the printer's ROM version, the ink counter code, and a nozzle check pattern. The test is printed in color.



Caution:
Do not turn off the printer while it is printing the nozzle check.


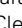
Note:
If the page doesn't print, turn off the printer. Then repeat this step, holding down the  Load/Eject button a bit longer.

The nozzle check pattern is shown below:

ROM version ink counter code

HU1174 00506

5. To end the self test, turn off the printer after it finishes printing one page.

Note:
You can run a character test by following the steps above and holding the  Cleaning button instead of the  Load/Eject button. The printer prints a page of letters and numbers.

Cleaning the Print Head


If your printed image is unexpectedly light or faint, or dots are missing from the image, you may need to clean the print head. This unclogs the nozzles so they can deliver ink properly.

Cleaning the print head uses ink, so clean it only if print quality declines. You can use either of the following:

- ❑ The Head Cleaning utility in your printer software (when the printer is connected directly to the computer)
- ❑ The printer's control panel buttons (when using DOS, when your printer is part of a network, or when you don't want to use the Head Cleaning utility)

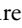
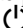
Note:

To save ink, use the Nozzle Check utility in your printer software to run a nozzle check and confirm that the print head needs to be cleaned. To run a nozzle check, access the printer software window and click the Utility tab to display the Utility menu. Click the Nozzle Check icon, then click Next. (See the next section for instructions on examining the nozzle check pattern.)


When the  Ink Out light is flashing or on, you cannot clean the print head; first replace the ink cartridge as described earlier in this update.


Using the Head Cleaning Utility

Follow these steps to run the Head Cleaning utility from a Windows computer connected directly to the printer:

1. Make sure the printer is turned on and not printing. Also make sure the  Ink Out light is off.
2. Access the printer software window.
3. Click the **Utility** tab at the top of the window. You see the Utility menu.
4. Click the **Head Cleaning** icon.
5. Follow the instructions on the screen to clean the print head. Cleaning the print head takes about one minute, during which the  Power light flashes.

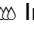




 
Caution:
Never turn off the printer while the  Power light is flashing.


6. When the  Power light stops flashing, you need to run a nozzle check to test the print quality and reset the cleaning cycle. Make sure paper is loaded in the printer and click **Print nozzle check pattern**. Then click **Next**.
7. See the next section for instructions on examining the nozzle check pattern.
8. If your print quality has not improved, repeat the steps above. You may need to do this two or three times.


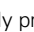
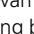
Using the Control Panel


Follow these steps to clean the print head using the control panel buttons:

- 1. Make sure the printer is turned on and not printing. Also make sure the  Ink Out light is off.
- 2. Hold down the  Cleaning button for three seconds. The  Power light starts flashing and the printer begins cleaning the print head. Cleaning the print head takes about one minute.



Caution:
Never turn off the printer while the  Power light is flashing.

Note:
If you accidentally pressed the  Cleaning button while the  Ink Out light is flashing or on, the ink cartridge replacement procedure starts. If you don't want to replace the ink cartridge at this time, press the  Cleaning button again to return the print head to its home position.

- 3. When the  Power light stops flashing, you need to print a page to test the print quality and reset the cleaning cycle. If you're using DOS or your printer is part of a network, open an application and print a document containing black and color data.

If your printer is connected directly to your computer, run a nozzle check. To do this, access the printer software window and click the **Utility** tab to display the Utility menu. Click the **Nozzle Check** icon, then click **Next**. (See the next section for instructions on examining the nozzle check pattern.)

- 4. If your print quality has not improved, repeat the steps above. You may need to do this two or three times.

Examining the Nozzle Check Pattern

Examine the nozzle check pattern you print. It should look something like this, with the right side of the pattern colored cyan, magenta, and yellow:



Each staggered horizontal and straight vertical line should be complete, with no gaps in the dot pattern. If any dots are missing, clean the print head again, as explained in the previous sections.

Aligning the Print Head

If your printouts contain misaligned vertical lines, you may need to align the print head.

Using the Print Head Alignment Utility

If you're using a Windows computer connected directly to the printer, you can align the print head using the Print Head Alignment utility in your printer software. Follow these steps:

- 1. Turn on the printer and make sure that paper is loaded in the sheet feeder.



Caution:
Use paper that is at least 8.3 inches (210 mm) wide so ink doesn't spray onto the platen.

- 2. Access the printer software window.
- 3. Click the **Utility** tab at the top of the window. You see the Utility menu.
- 4. Click the **Print Head Alignment** icon.
- 5. Follow the instructions on the screen to print an alignment test page and select the correct alignment.

Related Documentation

TM-SC300	EPSON Stylus COLOR 300 Service Manual
PL-SC300	EPSON Stylus COLOR 300 Parts Price List
CPD 6707	EPSON Stylus COLOR 300 User's Guide
CPD 6708	EPSON Stylus COLOR 300 Start Here guide